


## - 11 - SPARE PARTS

### 11.1 WARNING FOR THE CUSTOMER

Before ordering any particular spare part, it is always necessary to specify the serial number of the machine to which the part shall fit.

### 11.2 DETAILED DRAWING OF MACHINE CODE 103.0001 SEP2/M MOTORISED PC BOARD SEPARATOR 1 LINEAR BLADE AND 1 CIRCULAR BLADE 110V

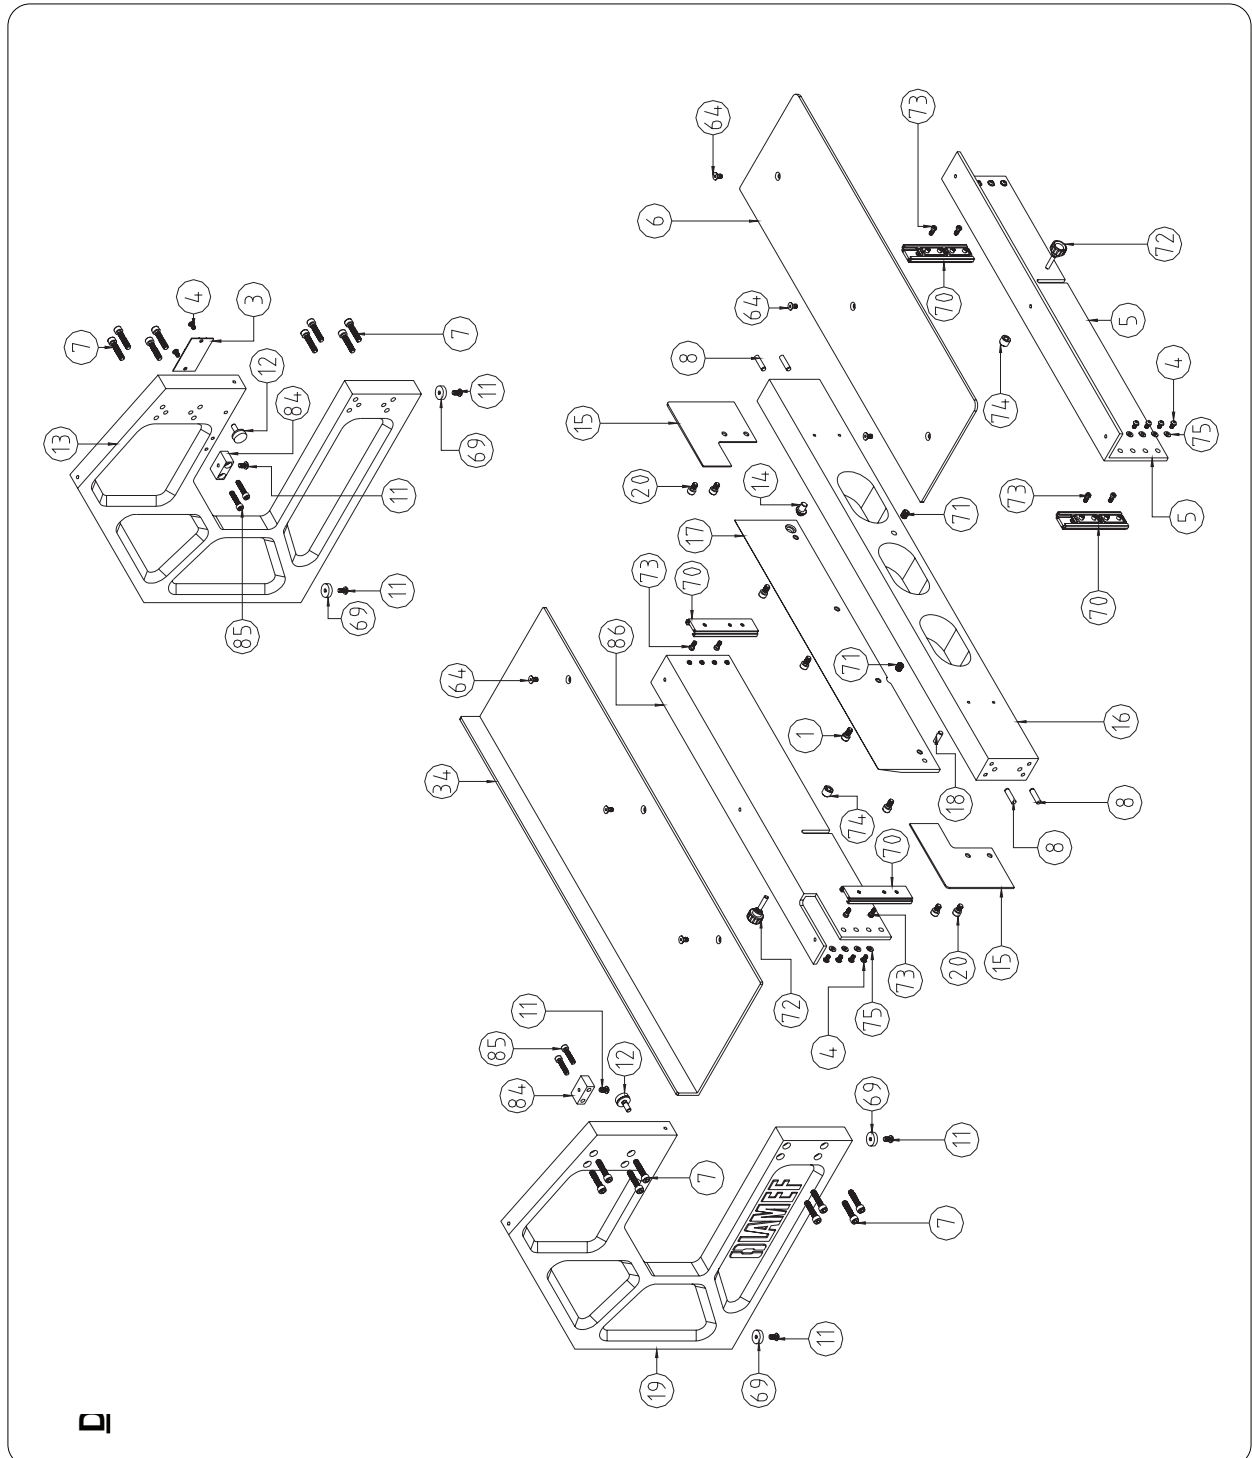

RT

