


- 11 - SPARE PARTS

11.1 WARNING FOR THE CUSTOMER

Before ordering any particular spare part, it is always necessary to specify the serial number of the machine to which the part shall fit.

11.2 DETAILED DRAWING OF MACHINE CODE 103.0001 SEP2/M MOTORISED PC BOARD SEPARATOR 1 LINEAR BLADE AND 1 CIRCULAR BLADE 110V

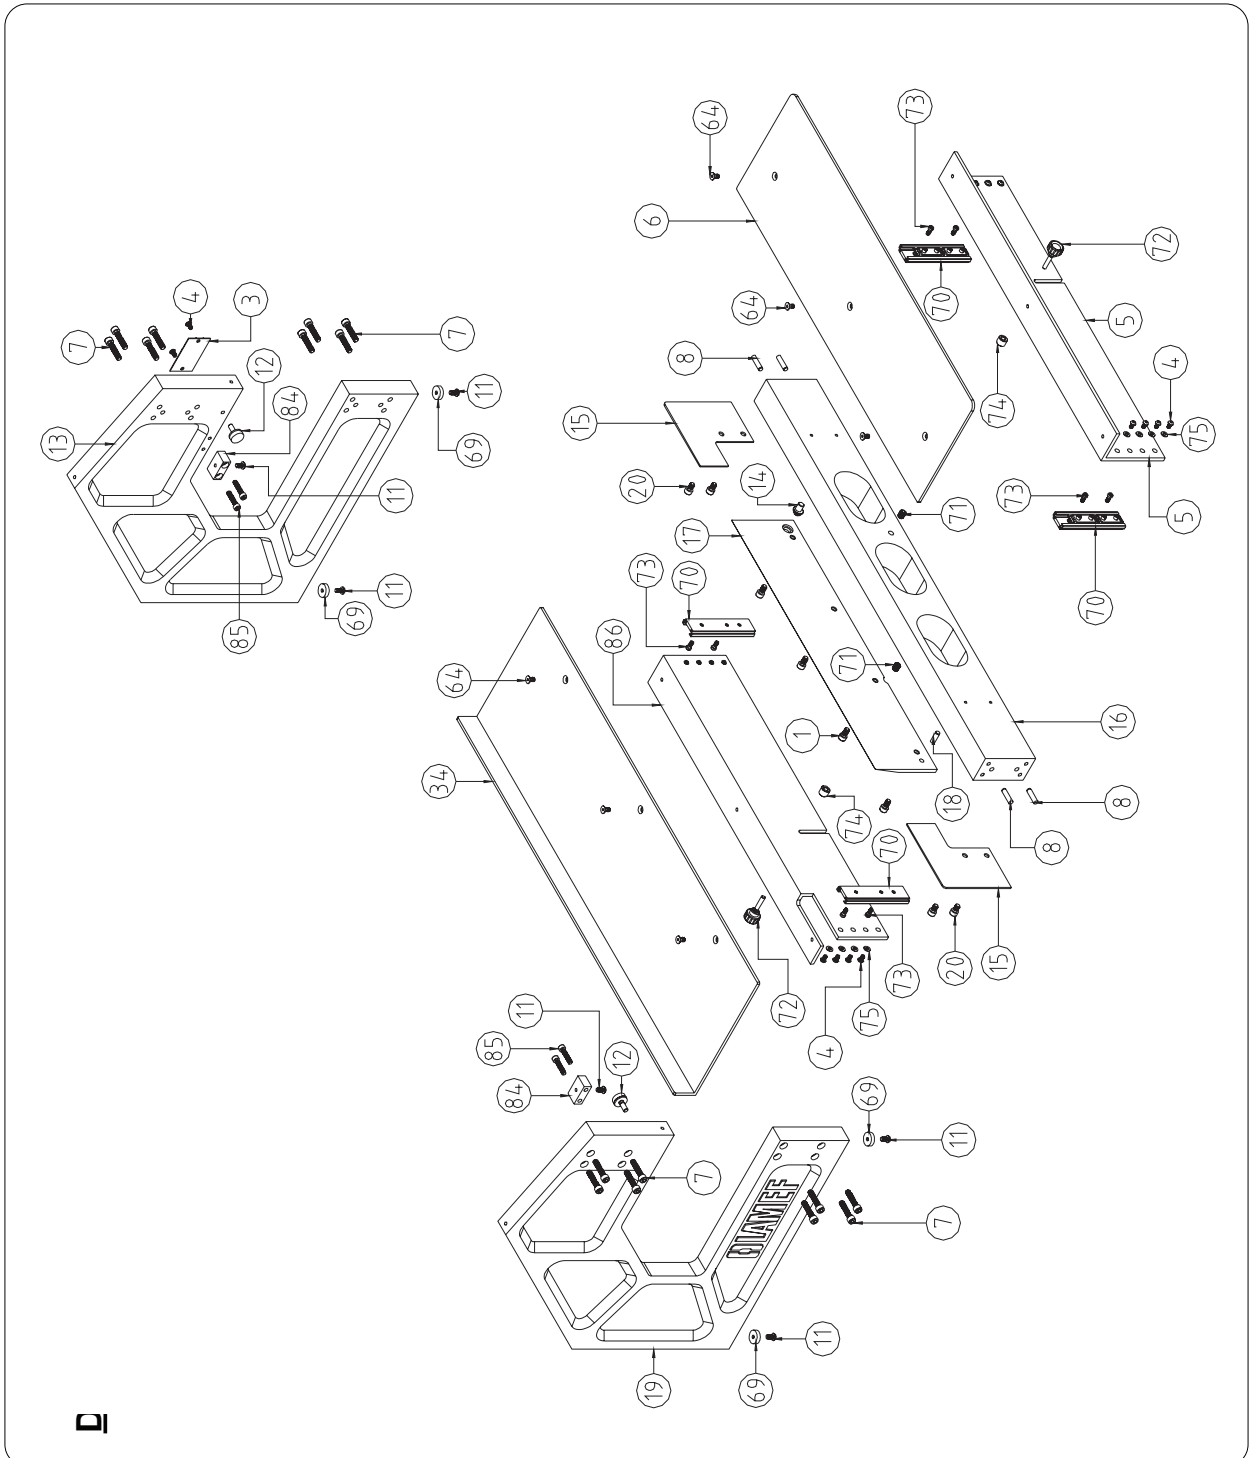

RT

